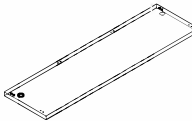








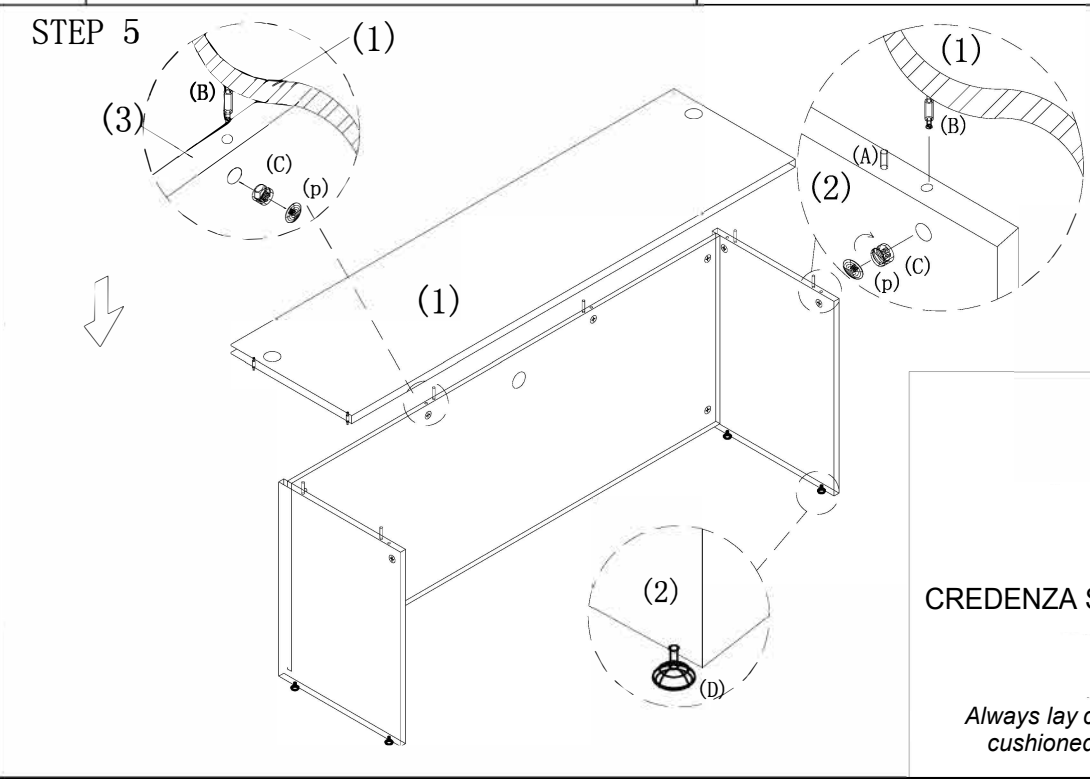
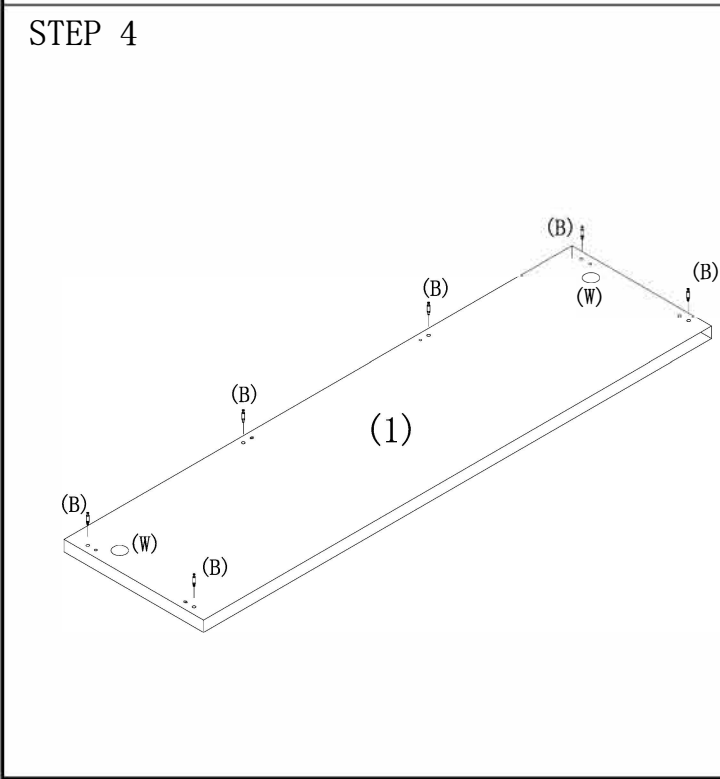
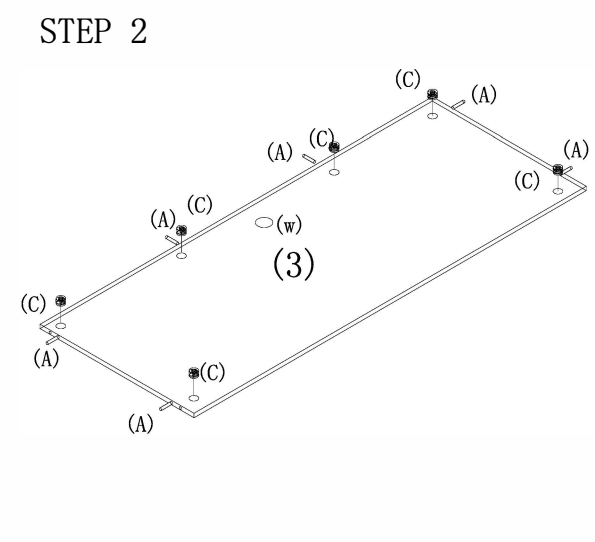
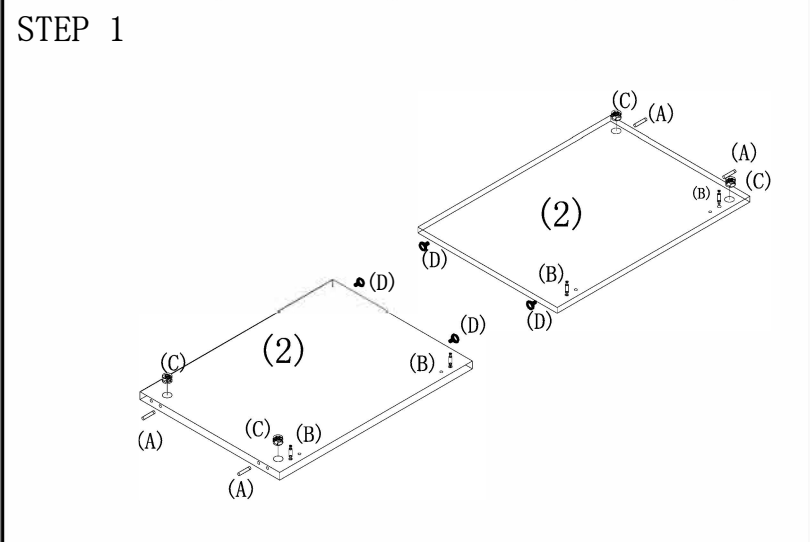
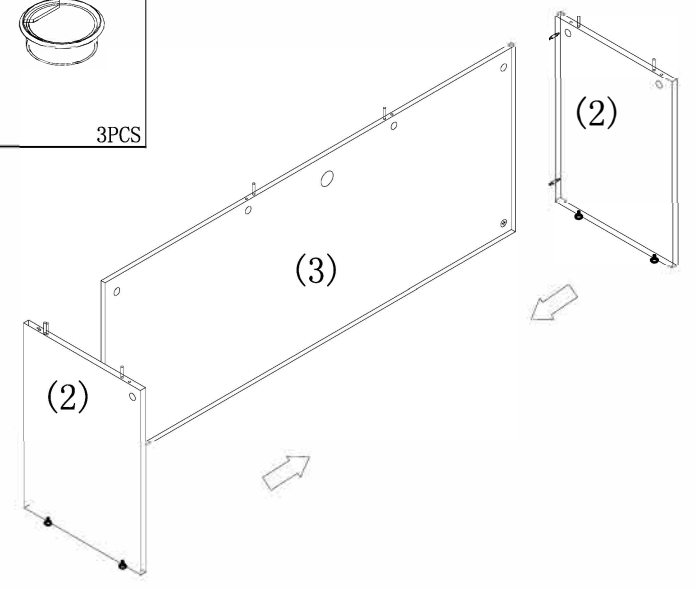


(1) Top  1PCS	(2) End Panel  2PCS	(3) Modesty Panel  1PCS	(A) Dowel  10PCS+1	(B) Cam Pin  10PCS+1	(C) Cam Lock  10PCS+1	(p) Cam Cover  10PCS+1	(D) Leg leveller  4PCS	(W) Grommet  3PCS
--	---	---	--	--	--	--	--	---

STEP 3



it.
office furniture distributors

CREDENZA SHELL 66"W x 24"D x 29"H

N11

Always lay components on a clean, soft-cushioned surface during assembly.