










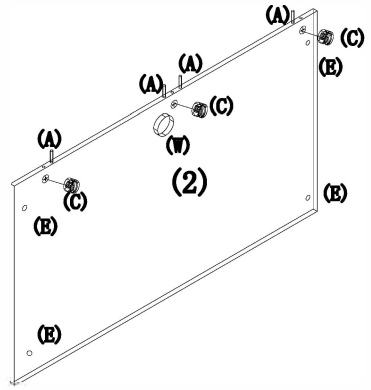
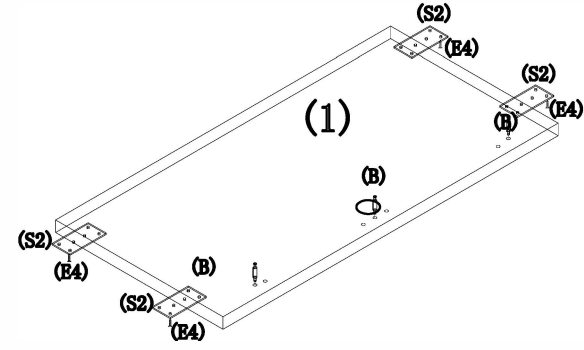


<p>(1) Top</p>  <p>1PCS</p>	<p>(2) modesty Panel</p>  <p>1PCS</p>	<p>(W) Grommet</p>  <p>2PCS</p>	<p>(S2) Flat bracket</p>  <p>4PCS</p>	<p>(A) Dowel</p>  <p>4PCS+1</p>	<p>(B) Cam Pin</p>  <p>3PCS+1</p>	<p>(C) Cam Lock</p>  <p>3PCS+1</p>	<p>(D) Cam Cover</p>  <p>3PCS+1</p>	<p>(E2) Wood screw</p>  <p>4PCS+2</p>	<p>(E4) Wood screw</p>  <p>24PCS+2</p>	<p>(D) Leg leveller</p>  <p>2PCS</p>
--	---	---	---	---	--	--	---	---	--	--


STEP 1



STEP 2



STEP 3

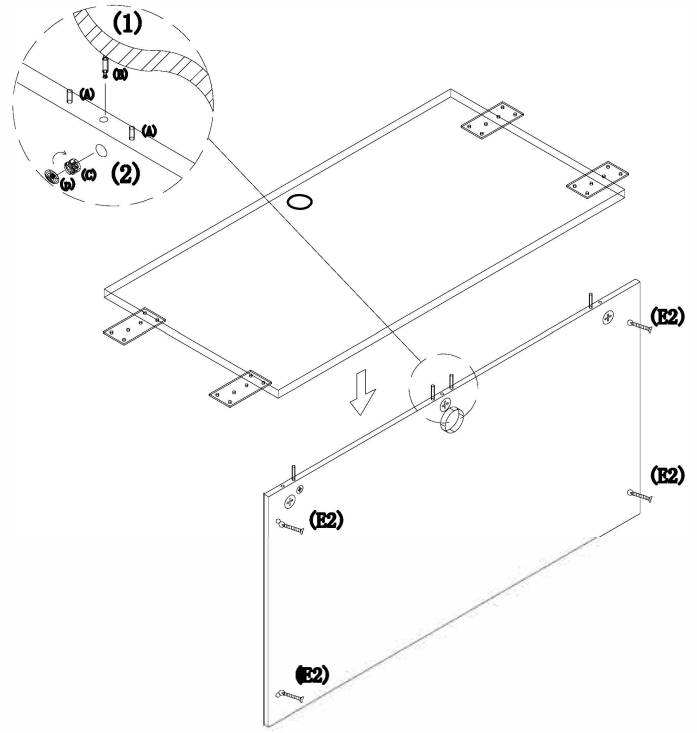


office furniture distributors
BRIDGE 48"W x 24"D x 29"H
N70
Always lay components on a clean, soft-cushioned surface during assembly.